 


Spare parts suitable for:
SUPREMA

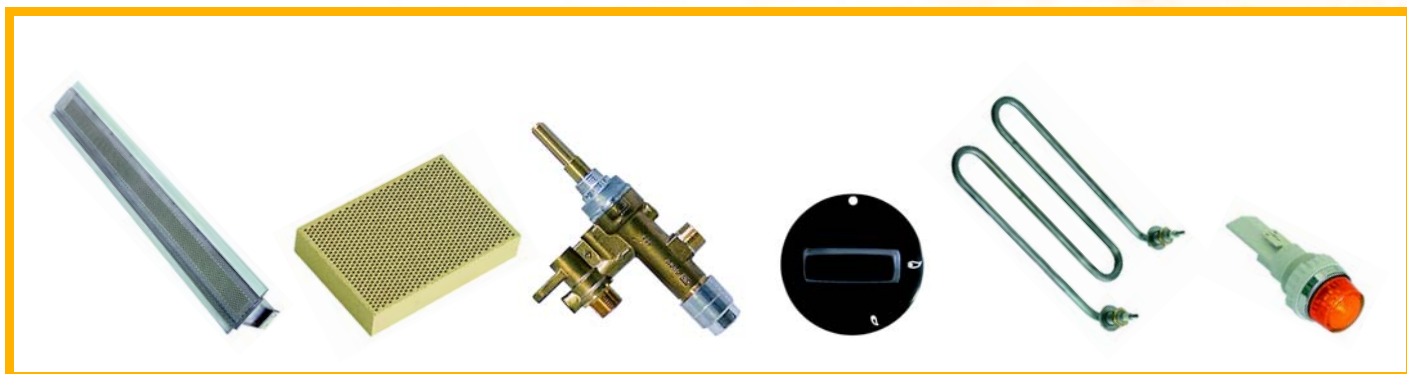 


Sausage roasters



Item	Order	Description	Model	OEM
1	105039	burner		
2	101638	gas tap	410,420,430,	
3	110149	knob	440,450	
4	102054	thermocouple		

Spit grills

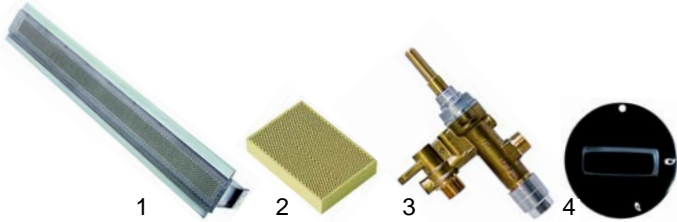

Item	Order	Description	Model	OEM
1	105040	burner		
2	693069	ceramic heater	model 4/3, 6/5	
3	101638	gas tap	model 7/6, 8/7	
4	110149	knob		

 


Pos.	Order	Description	Model	OEM
1	500493	motor complete	model 4/3, 6/5 model 7/6, 8/7	

Food warmers



Item	Order	Description	Model	OEM
1	416196	700W/230V (upper/lower)	HV60/76/108 HV110/111	
2	415108	500W/230V	HV60/76/108	

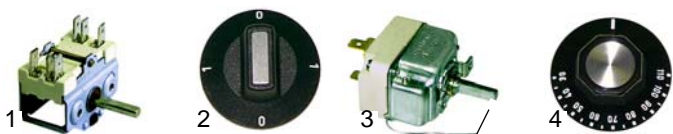

Item	Order	Description	Model	OEM
1	300001	switch		
2	110231	knob	HV60/76/108	
3	375001	thermostat	HV110/111	
4	110119	knob		



Item	Order	Description	Model	OEM
1	345212	light switch	HV_	
2	359620	halogen lamp		



Item	Order	Description	Model	OEM
1	359712	lighting device for oven complete	HV110	
2	359611	lamp 40W	HV111	
3	359724	lens nipple		

 


Item	Order	Description	Model	OEM
1	359069	signal lamp complete	HV60/76/108	
2	359606	glow lamp	HV110/111	

Warm-keeping devices



Item	Order	Description	Model	OEM
1	416498	600W/230V	901/902/903	
2	416509	1000W/230V	Grand	
3	550149	dip pipe		

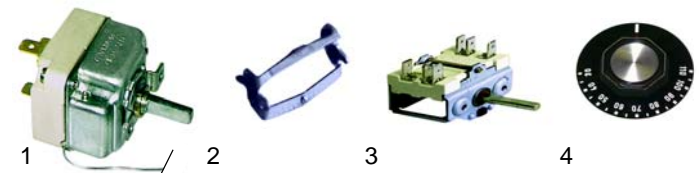

Item	Order	Description	Model	OEM
1	375001	thermostat 110°		
2	550060	retainer	901, 902, 903,	
3	300001	switch	Grand	
4	110119	knob		

Suitable for Suprema

 


Item	Order	Description	Model	OEM
1	345634	double rocker switch	901, 902, 903, Grand (old model)	
2	359069	signal lamp complete		
3	359606	glow lamp		



Item	Order	Description	Model	OEM
1	359712	bulb + housing complete		
2	359611	lamp 40W/23V	Grand	
3	359724	lens nipple		

Sausage roasters (new)

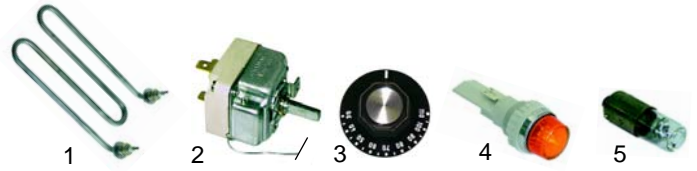

Item	Order	Description	Model	OEM
1	416196	700W/230V		
2	375001	thermostat		
3	110119	knob	930, 931, 932	
4	359069	signal lamp complete		
5	359606	glow lamp, Ba9S		